

Smart Temp

Digital Tire Pyrometer

Part # 21300/21320

TECHNICAL ASSISTANCE
Tanner Racing Products by MB
10 Cooperative Way. Wright City, MO. 63390
636-745-7757 800-558-4112



Smart Temp

Digital Tire Pyrometer

Part # 21300/21320

TECHNICAL ASSISTANCE
Tanner Racing Products by MB
10 Cooperative Way. Wright City, MO. 63390
636-745-7757 800-558-4112



Smart Temp

Digital Tire Pyrometer

Part # 21300/21320

TECHNICAL ASSISTANCE
Tanner Racing Products by MB
10 Cooperative Way. Wright City, MO. 63390
636-745-7757 800-558-4112

SMART TEMP TIRE PYROMETER

Congratulations on your purchase of the latest technology in tire pyrometers. Please take a few minutes to familiarize yourself with your new piece of equipment. This will allow you to use it to its fullest capabilities. Smart Temp Is designed to increase efficiency, speed and accuracy in acquiring tire temperature information.

Press once to show individual tire temp averages and AVERAGE

Press and hold to see which memory (1-10)

front and rear axle averages.

Press again to show left and right side average as well

as both cross averages.

Function Buttons

BACK

Press and release turns smart temp on. ON / OFF

Press and hold for 2 seconds turns off. Press to clear display.

Returns smart temp to previous location on the tire.

Scroll through memory by pressing and releasing the recall button.

you want to review.

LAST Returns to the previous measurements.

NEXT

will also move the display to the next temp location. Press and hold one of the next buttons while pressing and releasing the other to adjust contrast. This button also allows you to toggle between right side tempera-

Press to "lock-on" at peak temperature reading. This

tures and left side temperatures

STORE Press and hold to see which memory (1-10) location current measurements will be stored.

SMART TEMP TIRE PYROMETER

Congratulations on your purchase of the latest technology in tire pyrometers. Please take a few minutes to familiarize yourself with your new piece of equipment. This will allow you to use it to its fullest capabilities. Smart Temp Is designed to increase efficiency, speed and accuracy in acquiring tire temperature information.

Press once to show individual tire temp averages and AVERAGE

front and rear axle averages.

Press again to show left and right side average as well

as both cross averages.

Buttons Function

Press and release turns smart temp on. ON / OFF

Press and hold for 2 seconds turns off.

Press and hold to see which memory (1-10)

location current measurements will be stored.

Press and hold to see which memory (1-10) RECALL Press to clear display. you want to review.

RECALL

Scroll through memory by pressing and releasing the **BACK** Returns smart temp to previous location on the tire.

recall button.

LAST NEXT Press to "lock-on" at peak temperature reading. This Returns to the previous measurements.

will also move the display to the next temp location. Press and hold one of the next buttons while pressing and releasing the other to adjust contrast. This button also allows you to toggle between right side tempera-

tures and left side temperatures

SMART TEMP TIRE PYROMETER

Congratulations on your purchase of the latest technology in tire pyrometers. Please take a few minutes to familiarize yourself with your n piece of equipment. This will allow you to use it to its fullest capabilities. Smart Temp Is designed to increase efficiency, speed and accuracy in acquiring tire temperature information.

Press once to show individual tire temp averages and AVERAGE

front and rear axle averages.

Press again to show left and right side average as well

as both cross averages.

Buttons Function

Press and release turns smart temp on. ON / OFF

Press and hold for 2 seconds turns off. Press to clear display.

RECALL

Press and hold to see which memory (1-10)

vou want to review.

Scroll through memory by pressing and releasing the

recall button.

Press to "lock-on" at peak temperature reading. This LAST NEXT Returns to the previous measurements.

will also move the display to the next temp location. Press and hold one of the next buttons while pressing and releasing the other to adjust contrast. This button

also allows you to toggle between right side tempera-

tures and left side temperatures

BACK

STORE

STORE Press and hold to see which memory (1-10)

location current measurements will be stored.

Returns smart temp to previous location on the tire.