

Frequency Change Instructions

If there is interference with the operation of the scales (ex. much slower operation than normal or no operation at all) it may be necessary to change the frequency. This can be done by following these steps.

1. Set all scale pads out individually (at least 12" apart).
2. Pivot the hand held antenna until the antenna is perpendicular to the floor (this is essential for communication between the pads and hand held) and turn the hand held on by pushing the "ON/OFF" button. DO NOT turn the scale pads on at this time.
3. When the menu appears, select "RF Frequency" by pressing the "OK" button. Give the unit a few seconds to scan the channels and you will see numbers appear under "ACTIVITY". Scroll the arrow down and select the frequency with the lowest number (least amount of interference) by pressing "OK". (Typically 903-915 communicate the fastest.)
4. Turn the hand held off by pushing the "ON/OFF" button for 2 seconds.
5. Turn the scale pads on by switching the battery switch on each scale pad to "ON" and press the reset button on the front of the black box. (Green light will start blinking indicating power is on.)
6. Turn the hand held back on by pushing the "ON/OFF" button.
7. When the menu appears, select "Weigh Vehicle" by pressing the "OK" button. Give the hand held 2 minutes to start communication with the scale pads. When the red lights on ALL scale pads are blinking and numbers appear on the scaling screen the frequency has been changed and the scales are ready to use. If you find that one scale does not blink red after 2 minutes, simply turn that scale off and back on and press the reset button.



FOR FURTHER TECHNICAL ASSISTANCE CONTACT:
TANNER RACING PRODUCTS by MB
10 COOPERATIVE WAY
WRIGHT CITY, MO. 63390
800-467-2464 / 636-745-7757
TannerRacing.com



10" WIRELESS
RaceScale
#50220

Instructions

Scaling Instructions

Please read all instructions prior to operating scales.

1. Set all scale pads out individually (at least 12" apart).
2. Turn on the scale pads by switching the power switch on each scale pad to "ON" and press the reset button on the front of the black box. (Green light will start blinking indicating power is on.)
3. Pivot the hand held antenna until the antenna is perpendicular to the floor (this is essential for communication between the pads and hand held) and turn the hand held on by pushing the "ON/OFF" button.
4. When the menu appears, select "Weigh Vehicle" by pressing the "OK" button. Give the hand held a few seconds to start communication with the scale pads. When the red lights on ALL scale pads are blinking and numbers appear on the scaling screen the scales are ready to use. If you find that one scale does not blink red after 1 minute, simply turn that scale off and back on and press the reset button.
5. Zero the system (if necessary) by pushing the "MENU" button and selecting zero all pads. This will then display zero's in the locations selected. (this may take a few seconds)
6. Put your racecar on the scales and the weights will register, the %'s and totals will show on the display.
7. Turn the hand held off by pushing the "ON/OFF" button for 2 seconds.
8. Turn the scale pads off to conserve battery life.
9. The hand held unit contains rechargeable batteries, simply recharge by plugging the power adapter into the unit. For best performance, charge battery for 12 hours. Each scale pad contains (4) AA batteries.


Button Operation

TURNES UNIT ON OR OFF

SELECTS DESIRED FUNCTION

DISPLAYS THE MENU

TURNES BACKLIGHT ON

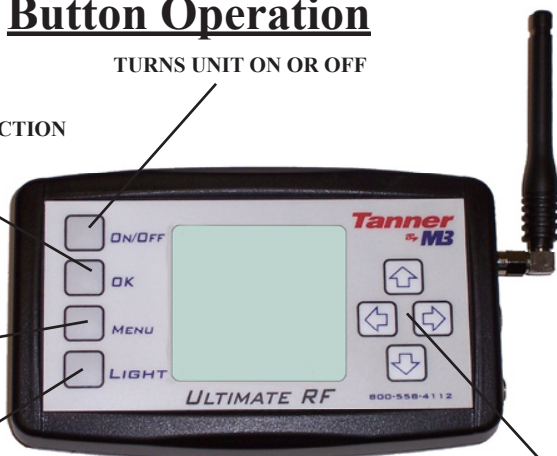

SCROLLING ARROWS

System ID / Pad Location Change

If you wish to change a pad location (ex. change the RF to the LR etc.) or change the system ID, this can be done by following these steps.

1. Set all scale pads out individually (at least 12" apart).
2. Turn on the scale pads by switching the power switch on each scale pad to "ON" and press the reset button on the front of the black box. (Green light will start blinking indicating power is on.)
3. Pivot the hand held antenna until the antenna is perpendicular to the floor (this is essential for communication between the pads and hand held) and turn the hand held on by pushing the "ON/OFF" button.
4. When the menu is displayed on the hand held, select "SYSTEM ID". Scroll the arrow down to the word ID and press the right arrow over to where the name is. When a character is underlined, you can change it to whatever you wish using the up and down arrows, this will make your system unique so no one else with a wireless scale system can pick up on your "channel" and see your information. Once you are finished scroll back completely to the left and back up until the arrow is pointing to "Save and Exit" then press "OK".
5. Plug the communications cable into the hand held and into one scale pad.
6. Press "MENU" and scroll down past "UNITS" & "PAD SETUP" will appear. This will allow you to change pad location and/or download a new system ID. Scroll the arrow down until it is pointed at the pad you are plugged into (RF,LF,RR or LR) and press "OK". You will see a message scroll across the bottom of the screen and the message "Pad set OK" will flash. Plug the cable into every scale pad to complete this step, each time selecting the pad you are plugged into. Once you have completed all 4 scale pads, you must turn the pads off by flipping the switch to "OFF" and turn the hand held off by pressing the "ON/OFF" button for 2 seconds.
7. Complete steps 1-5 of the scaling instructions and your scales are now ready to be used.
8. Turn the scale pads and hand held off to conserve battery life.

Thank you for your business.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.