





# Motorcycle *RaceScale* Instructions

FOR FURTHER TECHNICAL ASSISTANCE PLEASE CONTACT:  
TANNER RACING PRODUCTS 121 E. MULBERRY FORISTELL, MO. 63348  
800-558-4112 FAX 636-463-2874  
[www.tannerracing.com](http://www.tannerracing.com)  
[www.mittlerbros.com](http://www.mittlerbros.com)

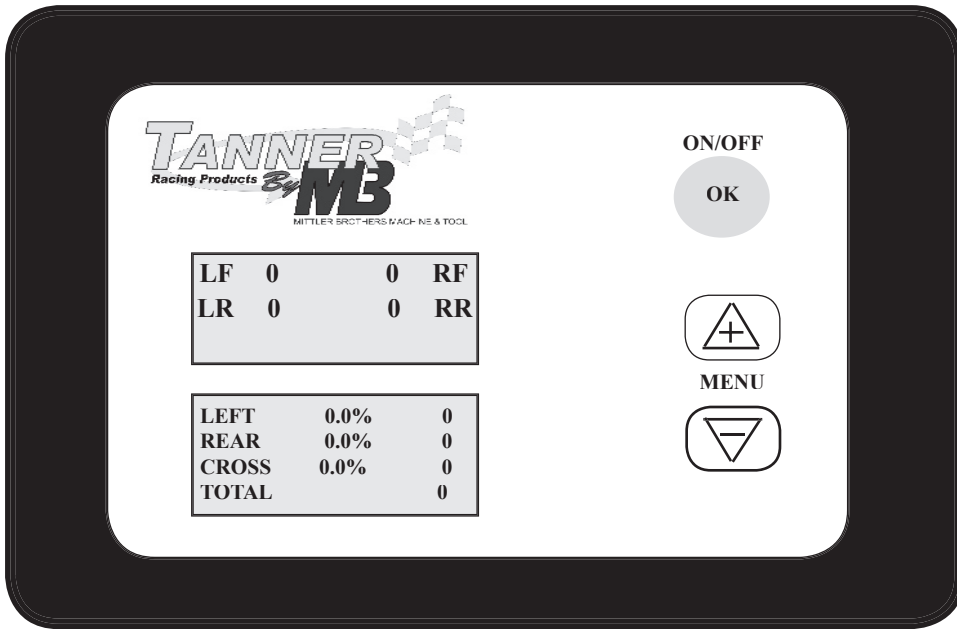

1. Set the scale pads out individually.
2. Plug the cables into the scale pads.
3. Turn the Racescales on by pushing the On/Off Button. The scales will turn on and read Tanner Racescales and show you the level of the battery. If the battery is low you may want to charge the unit.
4. ZERO the system by pushing the UP or DOWN Arrow and selecting Zero all pads. If you are not using both pads you may individually Zero each pad. After you highlight the choice on the menu you may select it by pushing the OK button. This will then display zero's on the locations selected.
5. Put your motorcycle on the scales and the weights will register on the LF and RF channels, the %'s and total will show on the bottom display. Weights will not be displayed on the LR and RR channels, this is for a 4 scale system only.
6. Shut the scales OFF by pushing the ON/OFF button for 2 seconds and the scales will turn off.
7. Remove the cables from the scale pads and put the unit away. If the racescale needs charging you can plug the AC adapter into the racescale and the battery voltage bar will display on the top display.

 **On/Off/Ok** Push this button to turn unit ON  
 Push and hold for 2 seconds to turn Unit OFF  
 Select this button as the OK button during the menu functions.



Push this button to enter into the menu.  
 This button will also allow you to scroll up.



Push this button to enter into the menu.  
 This button will also allow you to scroll down.

If you have any questions or need technical assistance please call 800-558-4112. Thank you and good luck racing.