




CONGRATULATIONS ON YOUR PURCHASE OF THE LATEST TECHNOLOGY IN RACESCALES

RACESCALES
MODEL # 50300

FOR FURTHER TECHNICAL ASSISTANCE PLEASE CONTACT
TANNER RACING PRODUCTS, INC. 215 Clay St N. W. B-2
AUBURN, WA. 98001
253-939-1415 FAX 253-939-1416

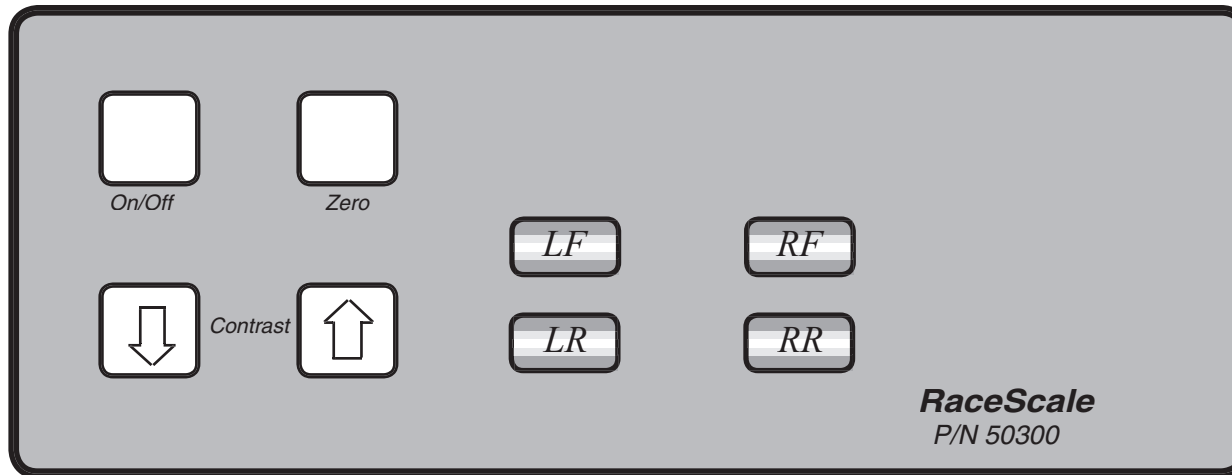

50300 Economy Scale Instructions

Operating Instructions

- On/Off** THIS BUTTON TURNS SCALE ON OR OFF WHETHER RUNNING ON THE BATTERY OR POWER ADAPTER.
- ZERO** USED TO ZERO SELECTED SCALE SYSTEM. (SELECT A WHEEL AND PUSH ZERO)
- CONTRAST** THESE BUTTONS WILL LIGHTEN OR DARKEN DISPLAY FOR EASIEST VIEWING

Use of RaceScales

1. *Plug cables into platform. Cables are labeled for proper wheel location.*
2. *Push the on button.*
3. *It is very important your read these before starting to scale your car*

Zeroing is accomplished by selecting desired wheel locations. Selected locations are indicated by flashing numbers. It is usually necessary to select all 4 wheel locations during initial turn on.

You are now ready to scale your vehicle.

Place vehicle on scales.

If all 4 wheel locations are flashing the total weight will show & the % location will read 100%.

To check L.S. (left side) you will select or de-select the proper buttons so the 2 left side wheel locations are flashing. You will now see the combined weight of the L.S. wheels and their % of the total.

Select and De-Select for any Information you want to see.

NOTE: Charge battery overnight at least once a month for optimum life of battery.