




WIRELESS *RaceScale* Instructions

FOR FURTHER TECHNICAL ASSISTANCE CONTACT:
TANNER RACING PRODUCTS
10 COOPERATIVE WAY
WRIGHT CITY, MO. 63390
800-558-4112 / 636-745-7757
TannerRacing.com
MittlerBros.com

Button Operation

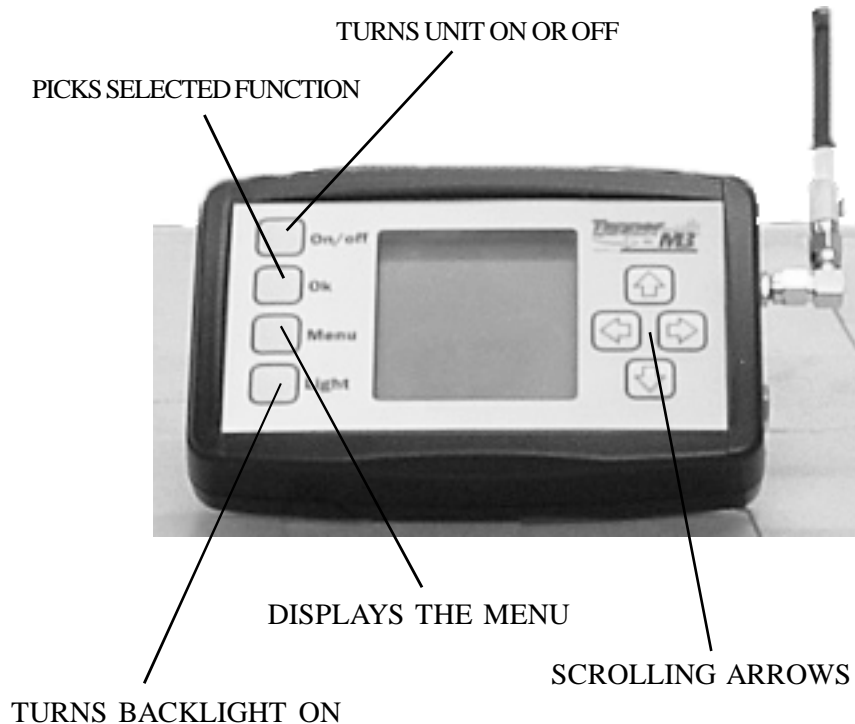

If you have any questions or need technical assistance please call 800-558-4112. Thank you and good luck racing.

Scaling Instructions

1. Set all scale pads out individually.
2. Turn on each pad by switching the battery switch to "ON" and press the reset button on the front of the black box. (Green light will start blinking indicating power is on, a few seconds later the red light will blink indicating pads are transmitting)
3. Turn the hand held on by pushing the "ON/OFF" Button. Give the hand held a few seconds to start communication with the scale pads.
4. When numbers appear on the scaling screen the scales are ready to use. Zero the system by pushing the "MENU" button and select zero all pads. If you are not using all pads you may individually zero each pad. After you highlight your choice on the menu you may select it by pushing the "OK" button. This will then display zero's on the locations selected. (this may take a few seconds)
5. Put your racecar on the scales and the weights will register, the %'s and totals will show on the displays.
6. Turn the hand held off by pushing the "ON/OFF" button for 2 seconds and the scales will turn off.
7. Turn the scale pads off to conserve battery life.
8. The hand held unit contains rechargeable batteries, simply recharge by plugging the power adapter in to the unit. Each scale pad contains (4) AA batteries.

Frequency Change / Pad Location Change

If you discover that there is interference with the scale pads "talking" to the hand held or you wish to change a pad location (ex. change the RF to the LR etc.) this can be changed by following these steps.

1. Turn each pad on and press the reset button on the front of the black box. (Green light will start blinking indicating power is on, a few seconds later the red light will blink indicating pads are transmitting)
2. Turn the hand held on by pushing the "ON/OFF" Button. Give the hand held a few seconds to start communication with the scale pads.
3. Press "MENU" on the hand held and select SYSTEM ID. Scroll down to the word ID and over to where the name is. You can change this ID to whatever name you wish using the arrows, this will make your system unique so no one else with a wireless scale system can pick up on your "channel" and see your weights. Once you are finished select "OK".
4. Press "MENU" on the hand held and select RF Frequency. Give the unit a few seconds to scan the channels and you will see numbers appear under ACTIVITY. You will want to select the frequency with the lowest number (least amount of interference).
5. Once you have selected a frequency, plug the communications cable into one of the scale pads and the hand held.
6. Press MENU and select PAD SET UP. This will allow you to change pad location if you wish. Whenever you change frequency, you should always plug the cable into each scale pad and reset each one to its location. (even if the location is not changed this will download the new frequency information)
7. Turn the scale pads and hand held off to conserve battery life.