

Division of Mittler Corp.  
 P.O. Box 110 Foristell, Missouri 63348  
 10 Cooperative Way Wright City, MO 63390


## 3100-100 Universal Tool Stand Assembly Instructions

### Kit Includes:


- 1 ea. Rear "H" frame
- 1 ea. Front Leg
- 1 ea. Top Tray
- 1 ea. Bottom Tray
- 18 ea. 5/16-18 x 1" Bolts
- 2 ea. 5/16" -18 x3" Bolts
- 20 ea. 5/16" Lock washers

- 20 ea. 5/16" Nuts
- 16 ea. 5/16" Flat Washer
- 3 ea. Swivel Casters, Locking
- 3 ea. 3/8-16 x 3" Bolts
- 3 ea. 3/8" Nuts
- 3 ea. 3/8" Lock washers
- 6 ea. 3/8" Flat washers
- 1ea. Instruction Sheet


1. Un-package the contents and verify that nothing is damaged or missing.

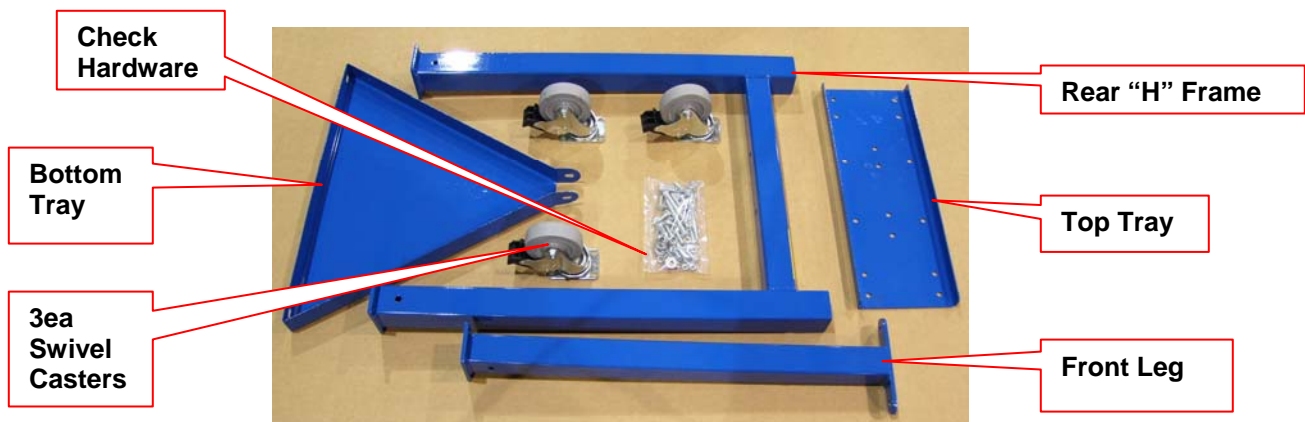


2. Lay the "H" Frame down like shown below. Attach the casters using the 5/16" x 1" bolts, lock washers & nuts. Bolt the remaining caster to the bottom of the front leg as shown. Be sure bolt are installed from the caster side.

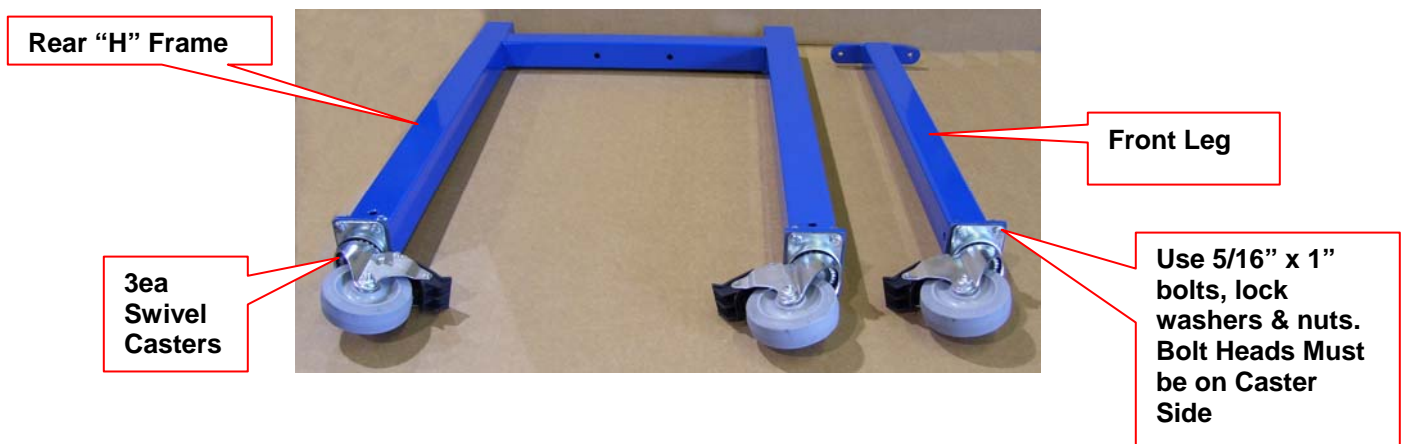

3. Attach the bottom tray to the rear H frame using the 3/8" x 3" bolts, lock washers & nuts. Attach the top tray to "H" frame using the 5/16" x 3" bolts, lock washers & nuts.

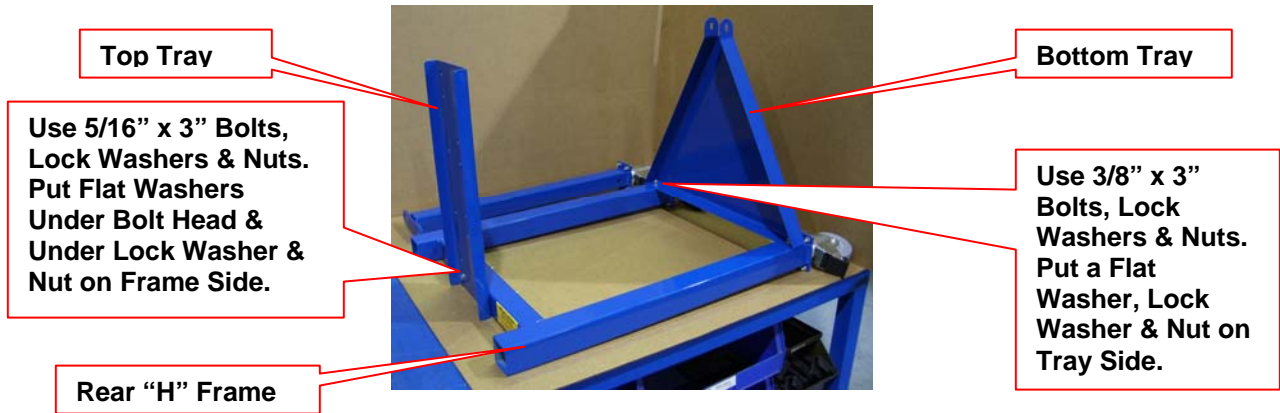

4. Install the Front Leg by slipping it between the tabs on the bottom tray and inserting a 3/8" x 3" bolt through the holes. Be sure that the mounting plate at the top is angled correctly as shown below. Use 5/16" x 1" bolts, lock washers & nuts to attach the leg top plate to the Top Tray. Put the flat washers on the tray side & nuts on the frame side.

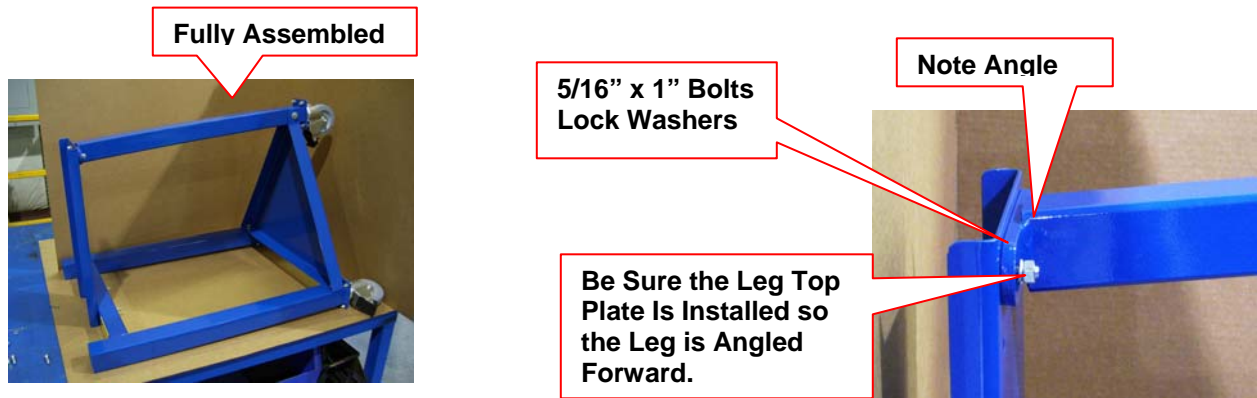

5. Pre Drilled mounting holes allow a multitude of **MB** machines to be mounted without any drilling. Additional machines of yours may be mounted by drilling your own mounting holes. **BE SURE STAND IS STABLE WHEN MACHINES ARE MOUNTED. MACHINE DAMAGE AND / OR PERSONAL INJURY MAY OCCUR IF MACHINES ARE IMPROPERLY MOUNTED. ALWAYS LOCK CASTER WHEN IN USE!**



**Thank You for Your Purchase.**

We appreciate your business.

If have any questions, comments or suggestions please contact us.

1-800-467-2464 [www.mittlerbros.com](http://www.mittlerbros.com)